


DIAMONDBACK *FITNESS*

1260sr Recumbent Exercise Bike

Owner's Manual

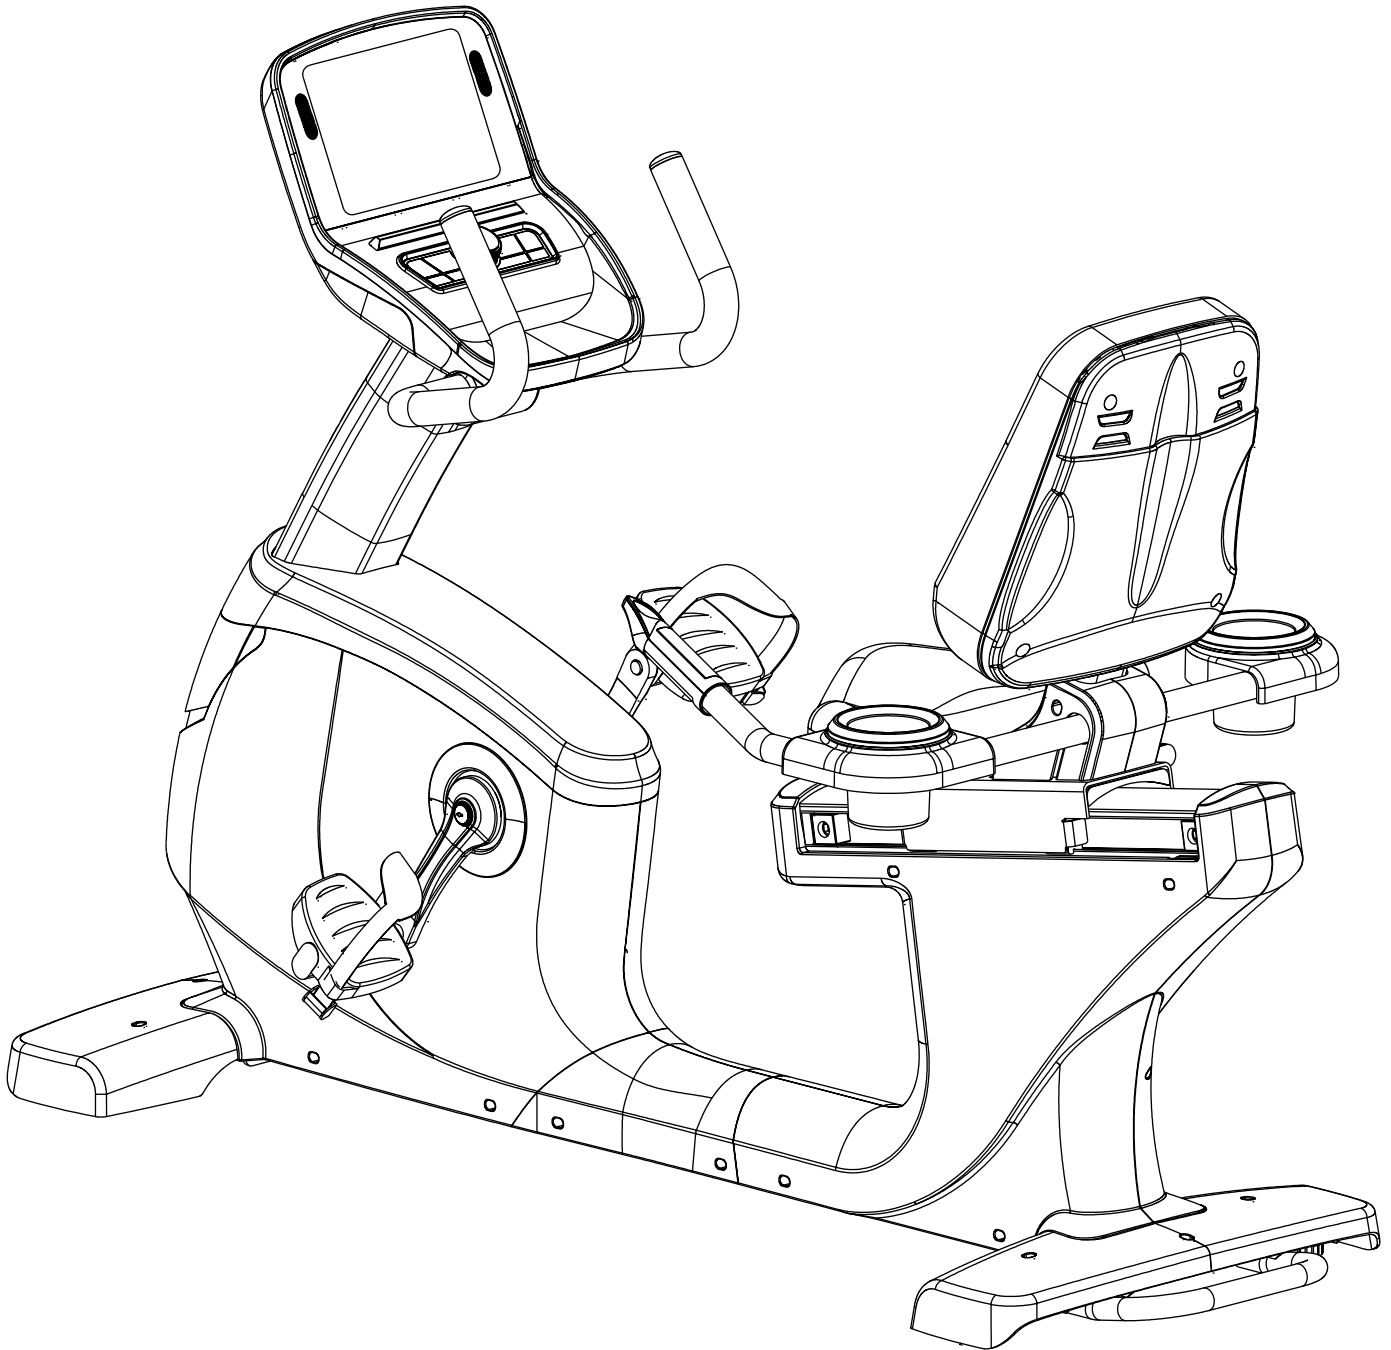



**Thank you for purchasing the
Diamondback Fitness 1260sr Recumbent Exercise Bike.
Please read through this owners manual carefully.**

**For the most up to date info about using your console and our
latest support videos, please visit www.diamondbackfitness.com**

**If you have any questions please contact our support team at
support@diamondbackfitness.com.**

Although current at the time of this printing, specifications for this model may have changed in our continuing effort for improvement. Diamondback Fitness reserves the right to modify and improve the specifications of its products without prior notice.

Safety Instructions & Warnings

Every piece of Diamondback Fitness equipment is built for maximum safety and meets or exceeds all applicable domestic and international standards. However, certain precautions must be taken when operating any piece of fitness equipment.

NOTE: Please read the entire owner's manual before operating the unit. Save this manual for future reference.

Cautions – For Safe Operation

- Keep hands and feet away from all moving parts and pinch points.
- If you have a history of heart disease, high blood pressure, diabetes, chronic respiratory diseases, elevated cholesterol, or if you smoke cigarettes or experience any other chronic diseases or physical complaints, consult with a physician before beginning any exercise program.
- If overweight or above the age of 35, consult with your physician before beginning an exercise program.
- Pregnant women should consult with their physician before beginning an exercise program.
- If you experience dizziness, nausea, chest pains or other abnormal symptoms during exercise, stop the exercise session immediately and consult your physician.
- Consume water before, during and after each exercise session.

Warnings – To Reduce the Risk of Injury to Yourself and Others


- To ensure proper function of your unit, do not install attachments or accessories not provided or recommended by Diamondback Fitness.
- Always wear proper clothing and shoes when exercising.
- User weight is not to exceed 300 pounds (136 Kg) for this unit.
- Keep children away from the unit. Hands and feet may become entangled with the moving parts and could result in serious injury.

- Place the unit in an area that will meet minimum clearance requirements:
front & sides = 24 inches (61 cm)
rear = 12 inches (30.5 cm)
- The unit is intended for indoor use only.
- Place the unit on a solid, level surface. Always adjust the leveling feet before using to ensure stability.
- Ensure all adjustment knobs and levers are fastened securely before using the unit and after making an adjustment.
- Use the handlebars when stepping on and off the unit.
- The unit is heavy. Do not attempt to move alone.
- Never operate the unit if it is damaged or broken.
- Always unplug the unit from the power source before moving or servicing.


Unpack Your Box

Unpack the box making sure all the parts are accounted for.


1: MAIN FRAME

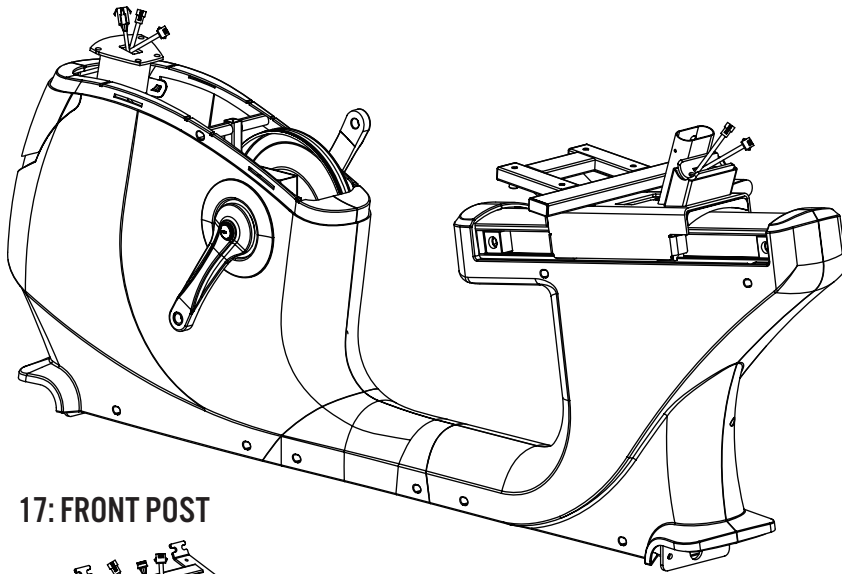


2: REAR STABILIZER

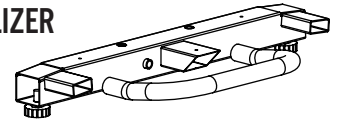

4: FRONT STABILIZER

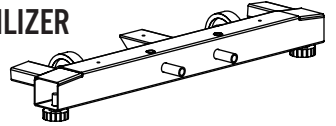


5: COVER - STABILIZERS

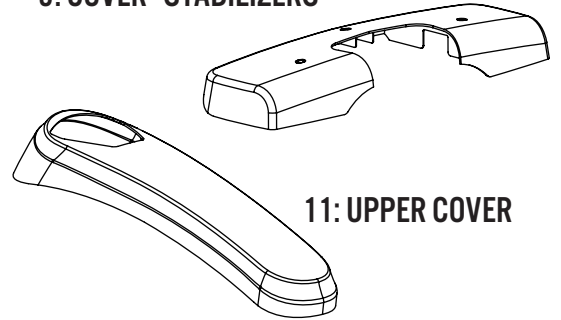


11: UPPER COVER

40: COVER - CONSOLE BACK




17: FRONT POST

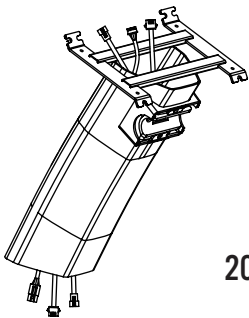


20: BOTTLE HOLDER



36: HANDLEBAR

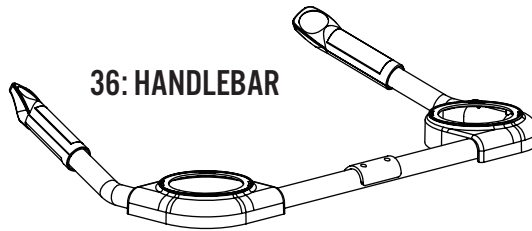


51: PEDALS

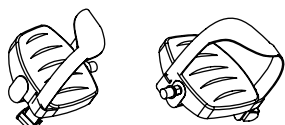

51L: LEFT 51R: RIGHT

72: HANDLEBAR

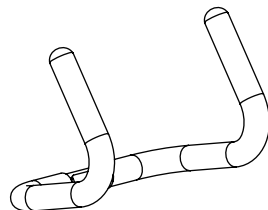


COVER: HANDRAIL



114: LEFT 115: RIGHT


66: POWER CABLE




69: SADDLE




76: CONSOLE

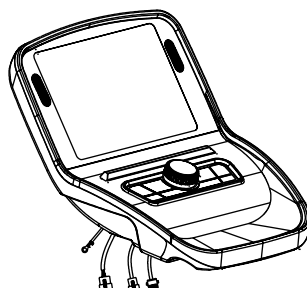

119: BACK PAD

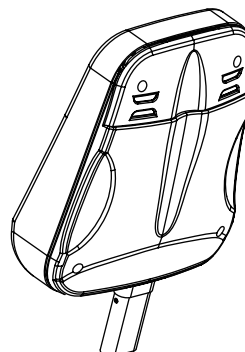


TOOLS AND HARDWARE

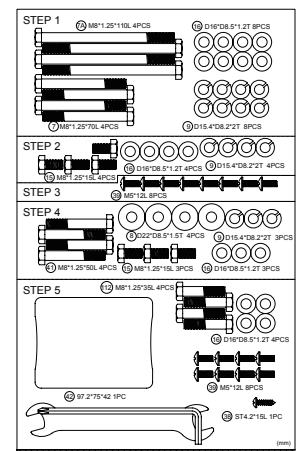

Please don't use power tools for any part of the assembly.

Attach the Rear Stabilizer

Tools



Parts:



- | | |
|-----------------------------|-------------------------------|
| 1 : Main Frame | 7A : M8x1.25x110L Bolt |
| 2 : Rear Stabilizer | 9 : Spring Washer |
| 7 : M8x1.25x70L Bolt | 16 : Flat Washer |

1

Throw away the fixing tube including two bolts into trash. They were for support in shipping and are not needed for assembly.


2

Take the packing material styrofoam and put it under the rear frame to assemble the rear stabilizer (**2**) onto the main frame (**1**) using the flat washer (**16**), spring washer (**9**) and bolts (**7 & 7A**).

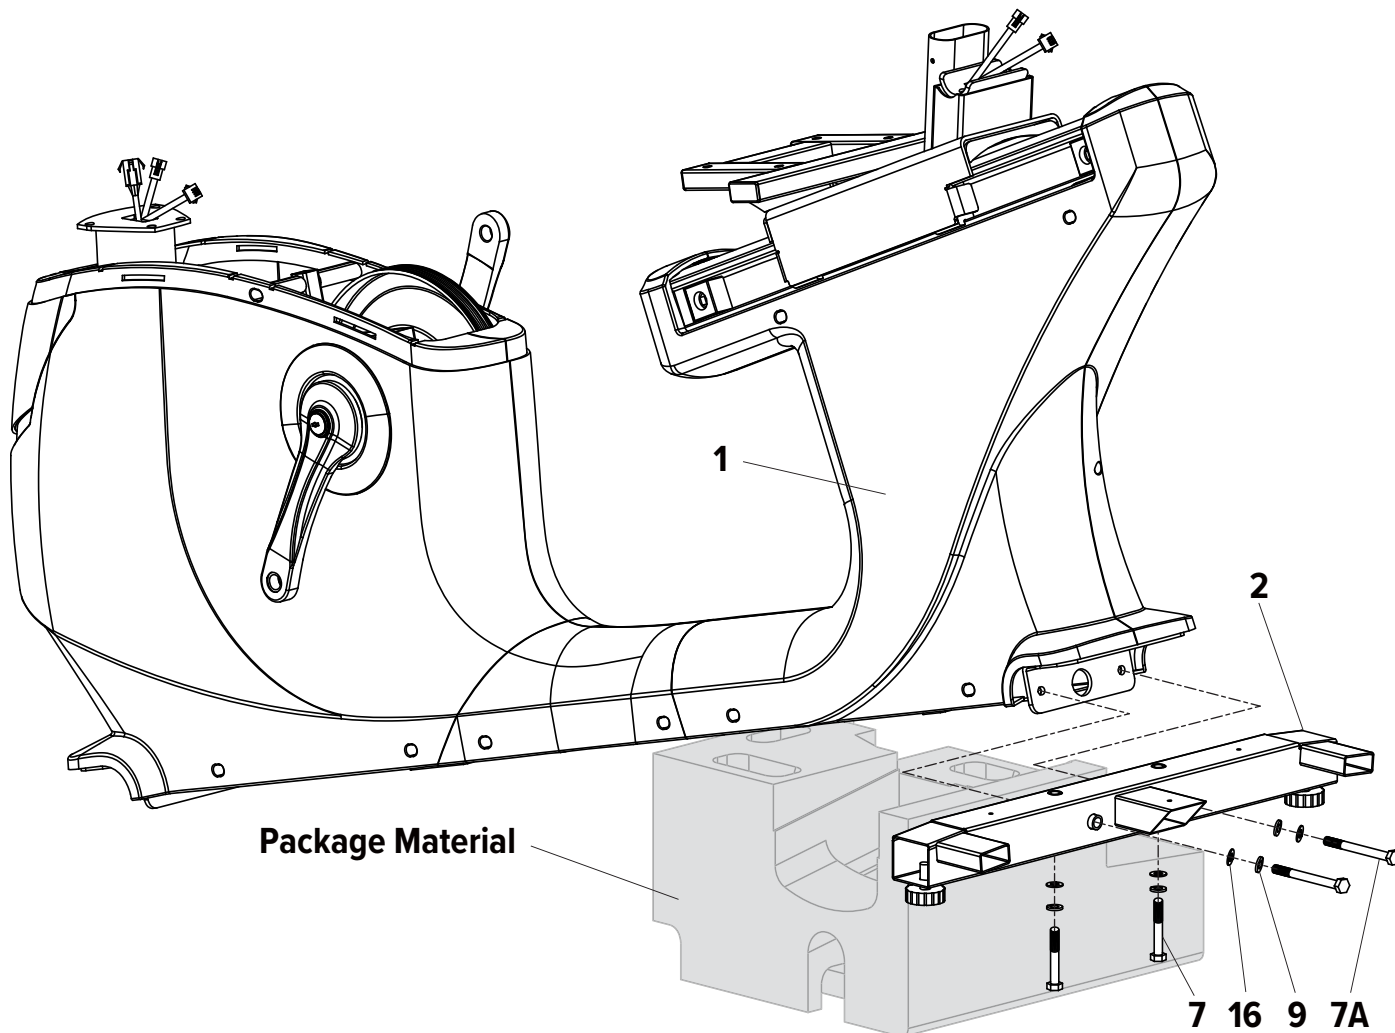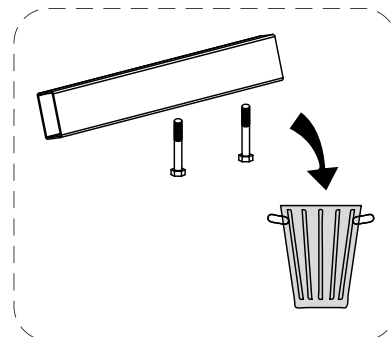

Attach the Front Stabilizer

Tools





Parts:

- | | |
|-----------------------------|-------------------------------|
| 1 : Main Frame | 7A : M8x1.25x110L Bolt |
| 4 : Front Stabilizer | 9 : Spring Washer |
| 7 : M8x1.25x70L Bolt | 16 : Flat Washer |


1 Throw away the fixing tube including two bolts into trash. They were for support in shipping and are not needed for assembly.

2 Take the packing material styrofoam and put it under the front frame to assemble the front stabilizer (**4**) onto the main frame (**1**) using flat washer (**16**), spring washer (**9**) and bolts (**7** & **7A**).

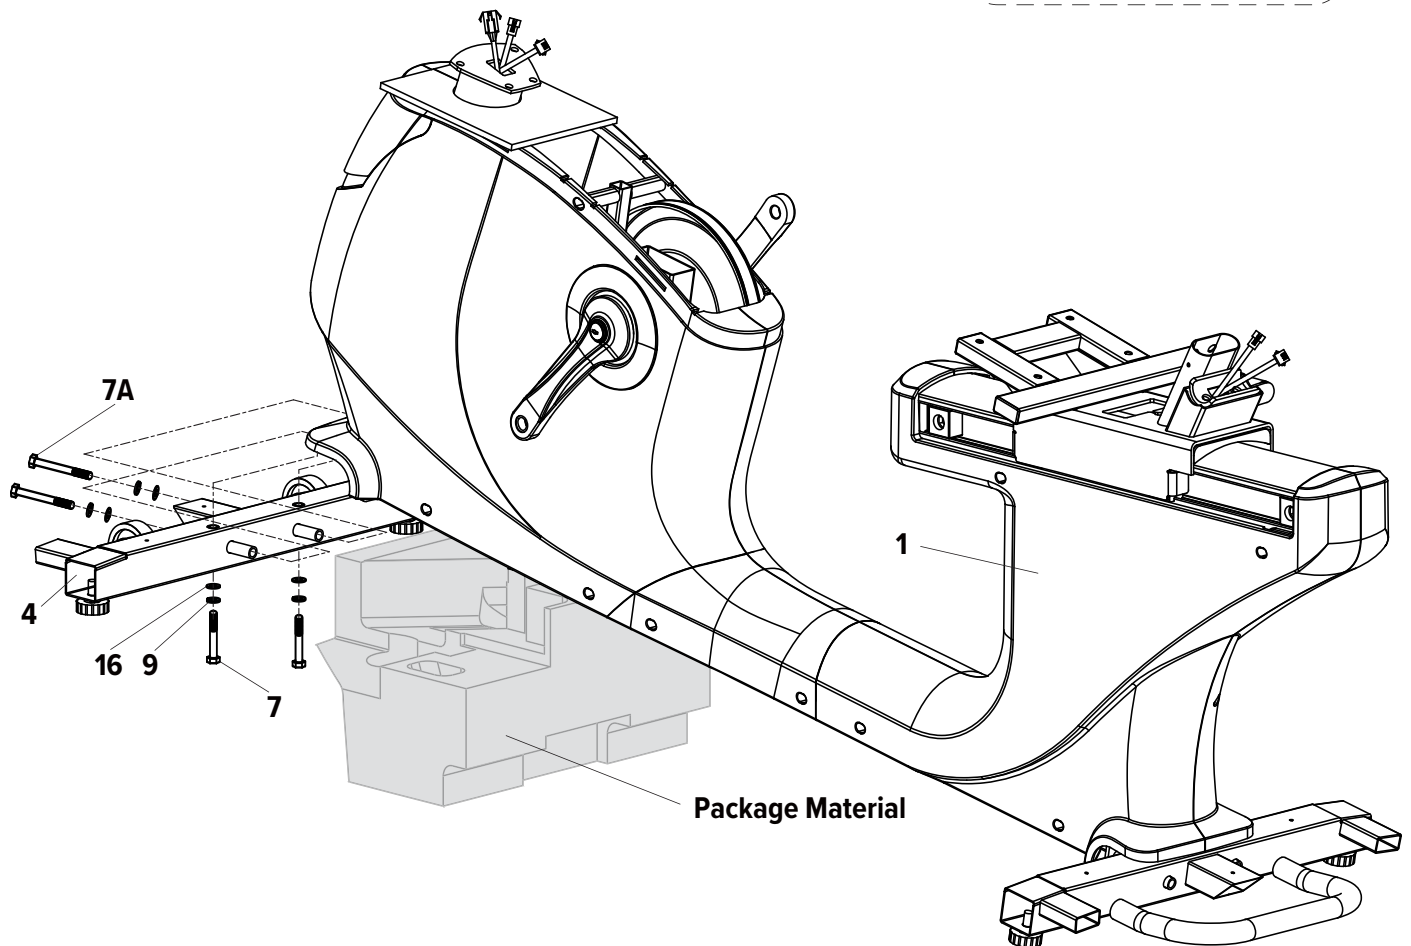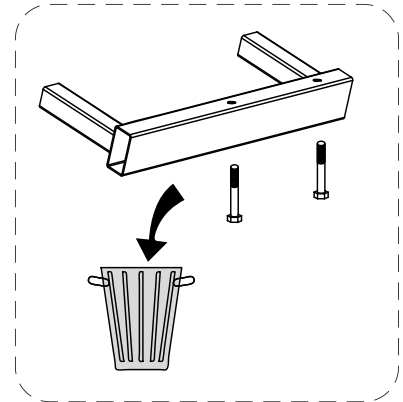

Attach the Front Post

Tools



Parts:

11 : Upper Cover

17 : Front Post


15 : M8x1.25x15L Bolt

9 : Spring Washer

16 : Flat Washer



1

Slide the upper plastic cover (**11**) onto the front post (**17**) and move it up.

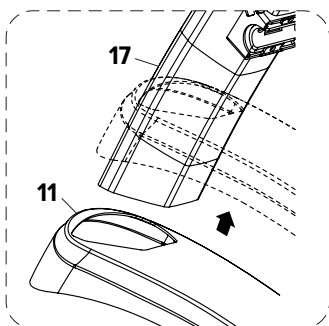


2

Connect the middle console cable (**64**) with the lower console cable (**65**). Then connect the middle quick button cable (**14**) and handpulse cable (**18**).

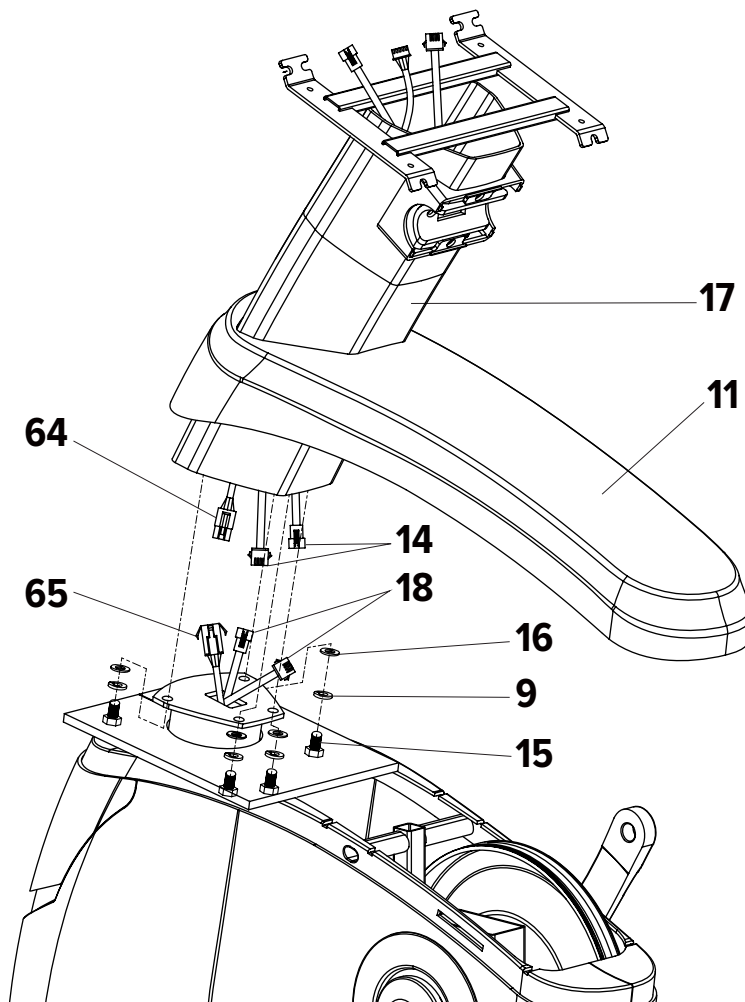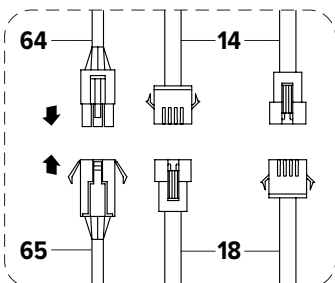


3

Throw away the fixing plate into the trash. It is not needed for assembly.

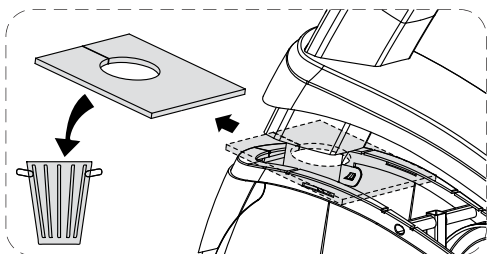


4

Attach the front post (**17**) onto the main frame using the flat washer (**16**), the spring washer (**9**), and bolt (**15**). Slide down the upper cover (**11**) and make sure it is flush with the front post.

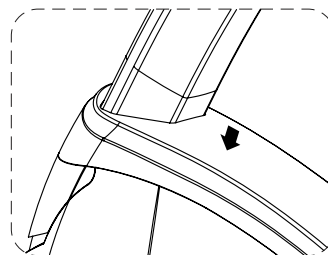

Attach the Console

Tools



Parts:


40 : Console Back

76 : Console

39 : M5x0.8x12L


1

Connect the console (76) with the middle console cable (64) and the middle quick button cable (14).

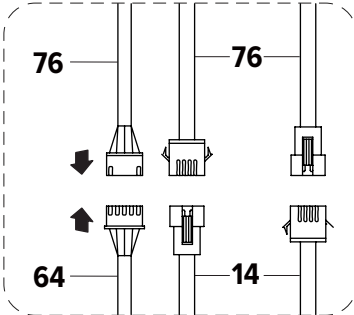





2

Attach the console (76) onto the front post using the cross bolts (39).

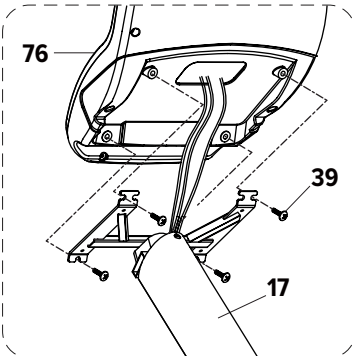


3

Attach the back console cover (40) to the console using the bolts.

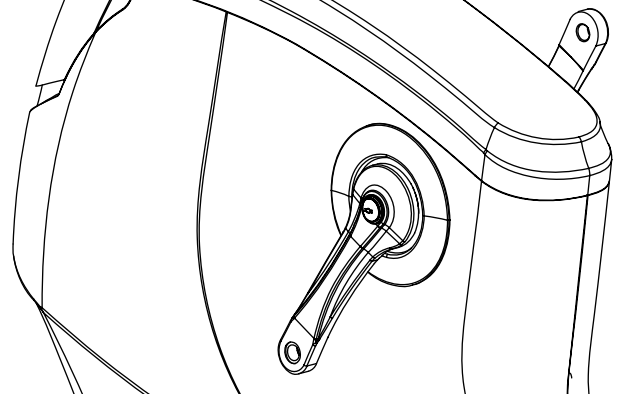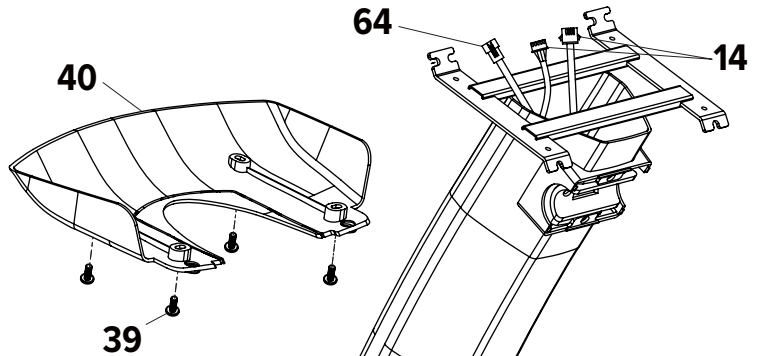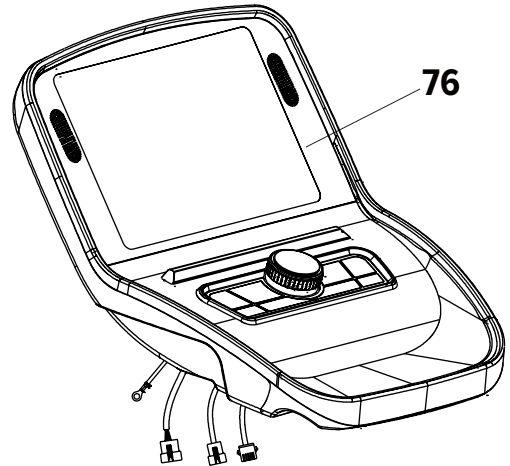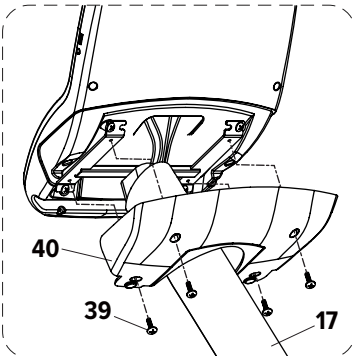

Attach the Seat

Tools



Parts:

69 : Saddle
119 : Back Pad


9 : Spring Washer
15 : M8x1.25x15L
16 : Flat Washer
112 : M8x1.25x35L

1

Attach the back pad (**119**) to the main frame using the flat washer (**16**), spring washer (**9**) and bolt (**15**).


2

Attach the saddle (**69**) to the main frame using the flat washer (**16**) and bolt (**112**).

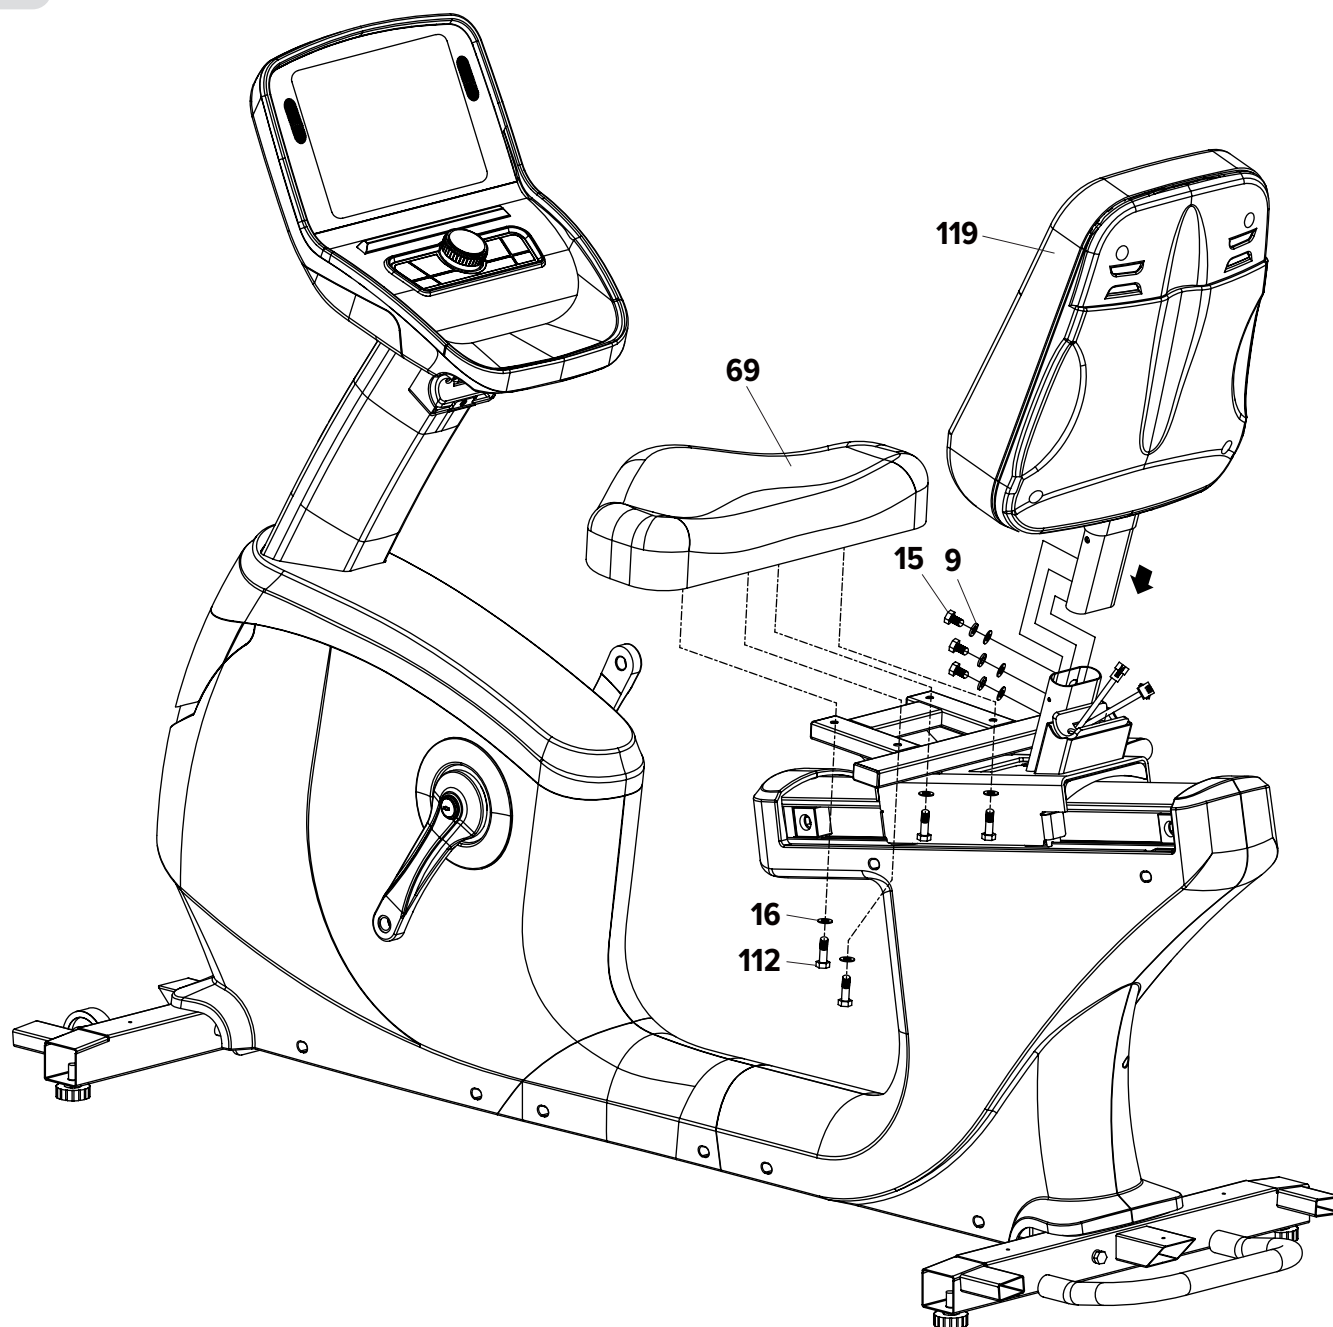

Attach the Handlebars

Tools



Parts:

20 : Bottle Holder
36 : Handlebar: Rear
42 : Handlebar Cover


72 : Handlebar: Front
41 : M8x1.25x50L
8 : Curve Washer

1

Connect lower quick button cable (**37L**) and lower quick button cable (**37R**) with the handpulse cable (**18**). Attach the rear handlebar (**36**) onto the frame using curve washer (**8**) and bolt (**41**). Place the bottle holders (**20**) into the two brackets located on the rear handlebar.


2

Attach the front handlebar (**72**) using the curve washer (**8**) and bolt (**41**). Then snap the handlebar cover (**42**) into place over the bolts (**41**).

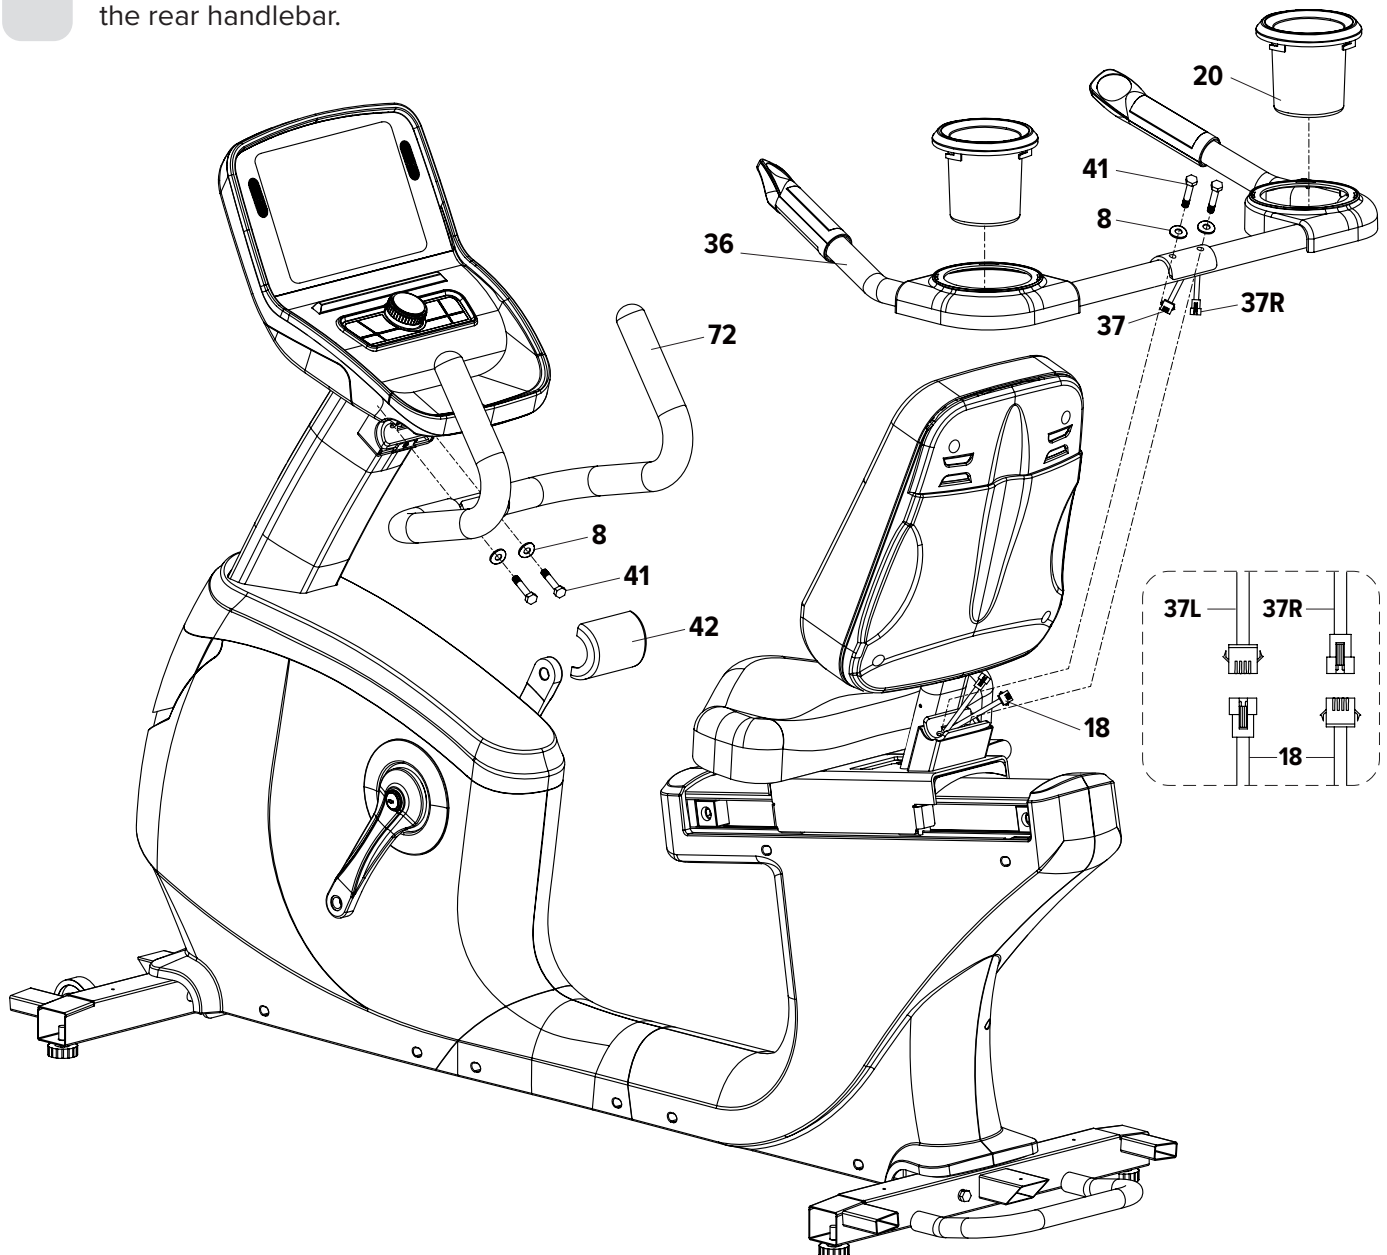

Attach Pedals and Covers

Tools

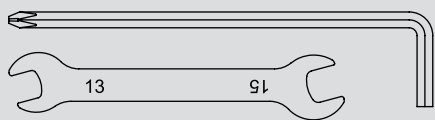

Parts:

51R: Right Pedal

51L: Left Pedal

5 : Stabilizer Covers

114: Cover Left

115: Cover Right

38 : ST4.2x15L

39 : M5x12L

1

Attach the front and rear stabilizer covers (**5**) and left and right handrail covers (**114**, **115**), using the cross bolts (**39**) and cross screws (**38**).


2

Attach the pedals. Start with the rider's right pedal (**51R**). Begin by finger tightening the pedal onto the crank arm. **Turn the right pedal CLOCKWISE.**

Be sure not to cross thread the pedal. This could damage the pedal and crank arm.

Repeat for the left pedal (**51L**). However, **turn the left pedal in COUNTER-CLOCKWISE** direction.


After finger tightening as far as possible, finish with the tool provided, making sure both pedals are fully seated and tight against the crank arm.

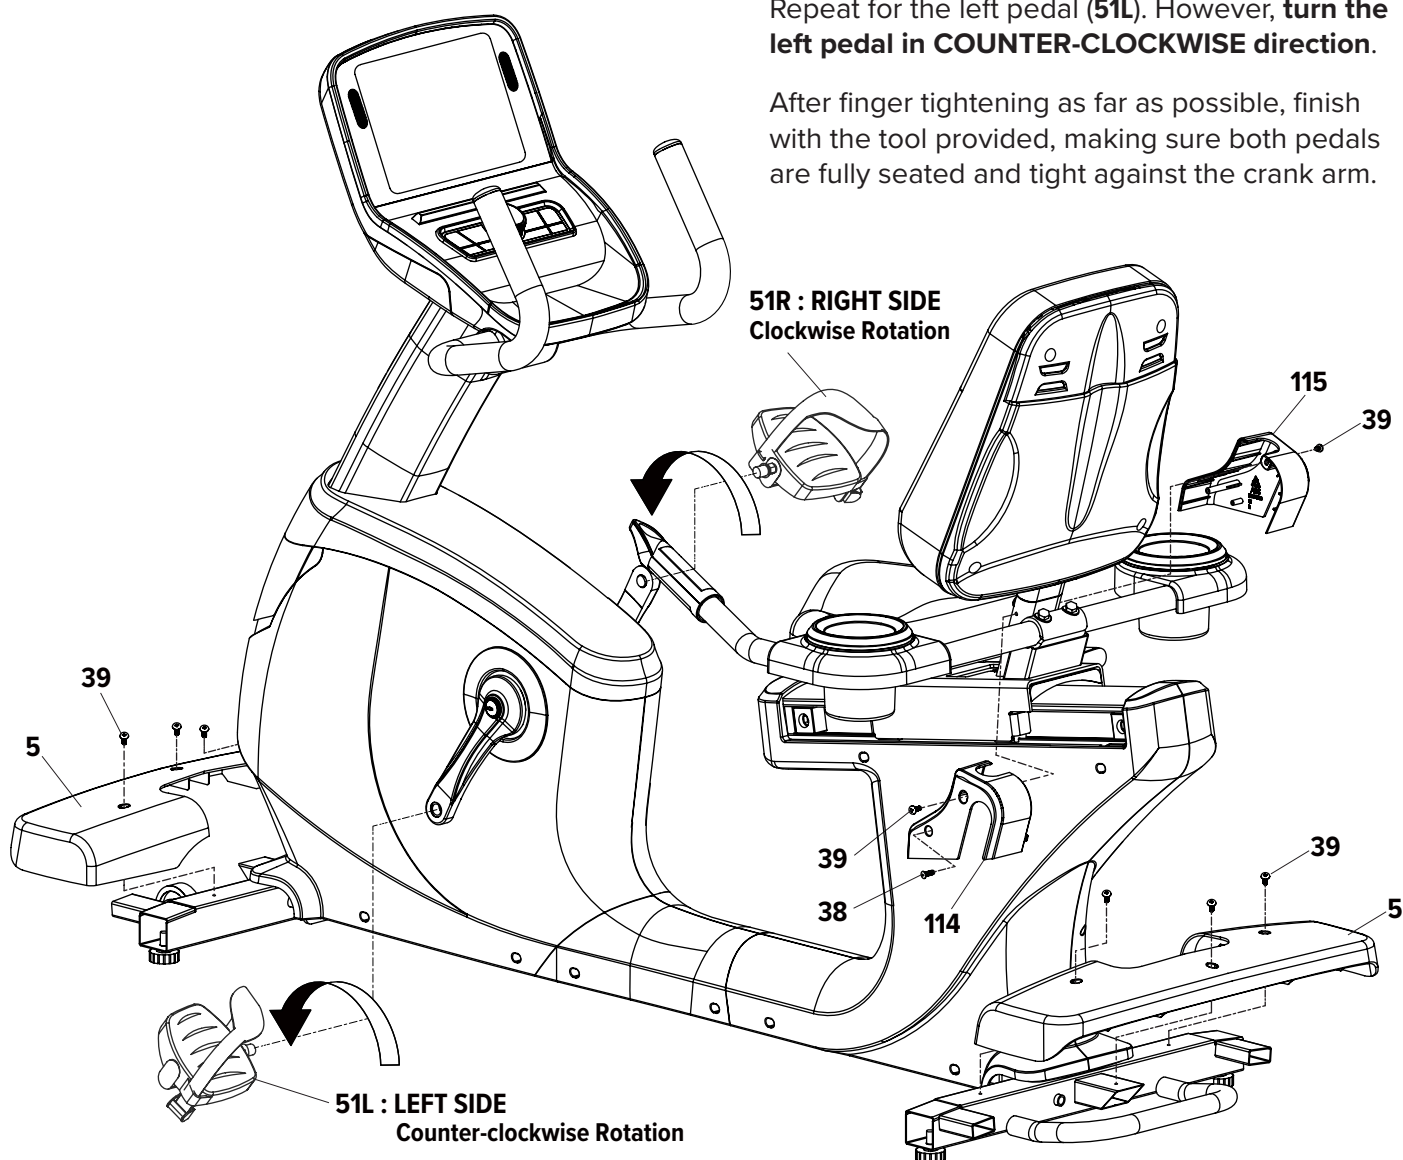

Powering the 1260sr and Final Adjustments

For the most up to date info about using your console and our latest support videos, please visit www.diamondbackfitness.com

Plug one end of the power adapter **(66)** into the outlet and the other end into the unit input power jack located in the front plastic housing.

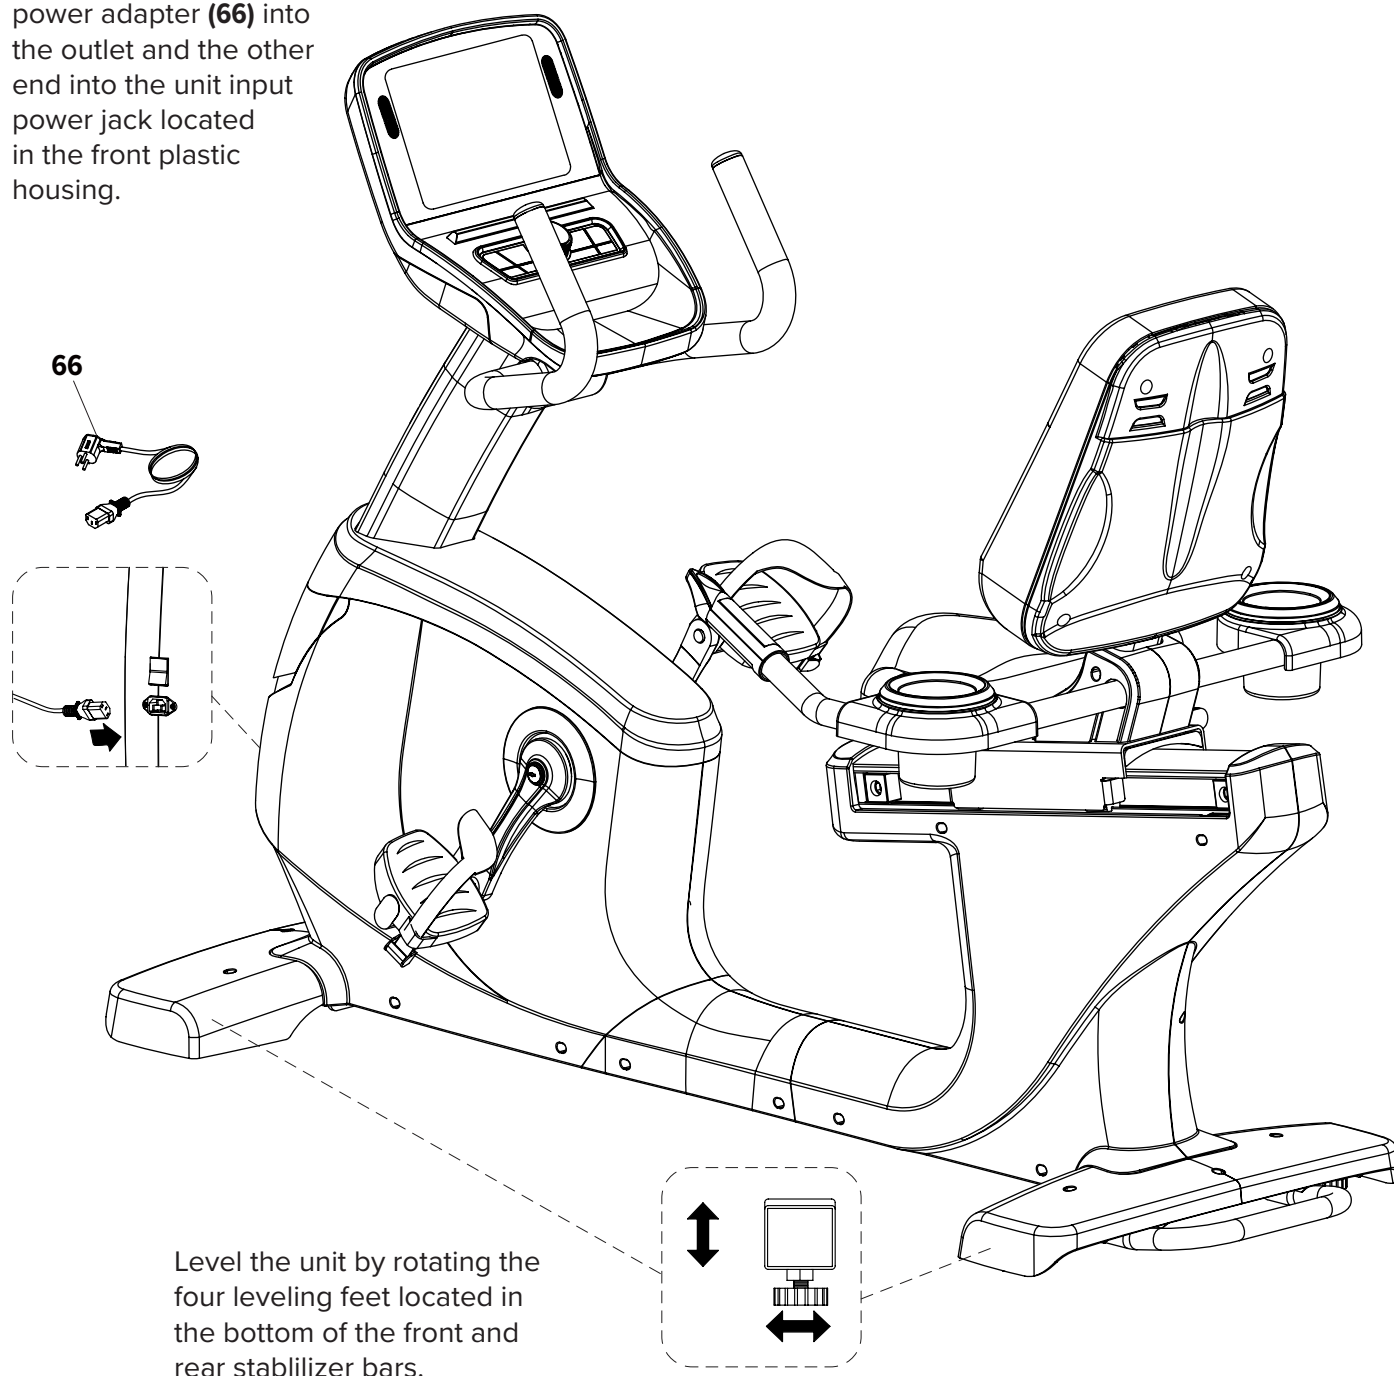

Level the unit by rotating the four leveling feet located in the bottom of the front and rear stabilizer bars.

Troubleshooting

Please do the following hard reset if you notice any small glitches in the console or resistance.

1. Make sure the unit is unplugged from the power source.
2. Remove the four screws holding the console cover to the unit and then remove the four screws holding the console to the console mast.
3. Unplug the middle console cable **(64)** from the back of the console for a period of five minutes.
4. Reconnect cable and plug the power source back in to test.

Maintenance

All Diamondback Fitness products are engineered for years of near-silent operation. Let noise be your first indication that a repair or adjustment is required. Please, discontinue use immediately and contact customer support or Diamondback Fitness Dealer if an unusual noise, scraping, knocking, grinding or vibration is detected. Often, a minor issue will become a major repair if ignored and use is continued.

Prior to each workout, confirm that all adjustment levers and screws are tightened.

Tighten the crank arms once per month. Loose crank arms will become damaged and are not covered under the warranty.

Your Diamondback Fitness product is manufactured of the most durable materials available. The plastics are molded of strong and chemical-resistant ABS and PVC. The frame is produced of high-tensile steel and protected with an industrial-grade, powder paint coating for the highest level of corrosion resistance. It is important to note however, that perspiration can be extremely corrosive if allowed to accumulate on the machine. After training, always wipe

Maintenance Cont'd

down the unit with a mild soap solution followed by a thorough drying with a clean towel. Positioning a small spray bottle and towel near the unit will help ensure that your Diamondback Fitness equipment looks new for many years.

Note: Perspiration is very corrosive and if allowed to remain on the machine, will cause discoloration, fading, rust and odors. Unfortunately, these conditions are not covered under the Warranty Policy.

Warranty Information

Diamondback Fitness warrants this unit to be free from defects in material and workmanship under normal use in the home environment. Diamondback Fitness's obligation under this warranty is limited to the repair or replacement of any defective part, provided free of charge. This warranty is extended to the original purchaser. The following conditions apply:

Who is Covered

The warranty is extended to the individual whose name appears on the original sales receipt and may not be transferred to any other individual or legal entity.

To Obtain Service

To obtain service under warranty, you must contact Diamondback Fitness customer support at support@diamondbackfitness.com

Proof of Purchase

Proof of purchase from a Diamondback Fitness Authorized Dealer or Diamondbackfitness.com will be required.

What is Covered – For Interior Residential Use Only.

Note: If proof of purchase cannot be confirmed, the Warranty's coverage period will begin on the date six (6) months after the date of manufacture.

Warranty Information Cont'd

Note: Limited lifetime refers to warranty coverage of the unit's expected service life, not the lifetime of the purchaser. The expected lifetime of this unit is five (5) years from the date of purchase although other factors can extend this period. Support and maintenance of the unit may become difficult or impossible after this period expires.

Frame :	Limited lifetime warranty; covers defects in welds, materials and workmanship (some exclusions apply).
Brake :	3 years
Parts & Electronics :	3 years
Labor :	1 year

Voided Warranty

The warranty does not apply to any failure of the product or its components due to alterations or modifications, misuse and abuse, accidental damage, lack of maintenance or improper assembly. Improper assembly can be avoided if the unit is assembled by an authorized technician. Damage due to improper assembly is not covered by the warranty. Common assembly errors can include damaged wire harnesses, stripped screws and nuts, crank arms or damaged threads.

If the serial number has been removed, altered or defaced, the warranty for the affected unit is voided.

Parts & Service

Contact the Diamondback Fitness support or the dealer that originally sold the unit. If you have moved, or the retailer is unavailable, contact us at support@diamondbackfitness.com to help locate an alternate Authorized Dealer.

Diamondback Fitness is not responsible for securing warranty service and/or honoring extended warranties provided by dealers.

NOTE: Authorized service technicians do not reside in all areas of the country. If you live beyond the reasonable service area of a metropolitan area, Diamondback Fitness may not be able to support the labor portion of the product warranty. Travel fees charged by technicians are not covered by the warranty.

Other Exclusions


The warranty for this unit is void if it is placed in commercial or light commercial environments such as health clubs, schools, hotels, condominium common areas, correctional facilities, or any other non-residential setting. The warranty will not be honored if this unit is employed for commercial or rental purposes. This unit is for indoor use only.

Additional Rights

This Warranty is expressly in lieu of all other warranties, and any implied warranties of merchantability or fitness for a particular purpose created hereby, and are limited to the same duration as the express warranty herein. Diamondback Fitness shall not be liable for any incidental or consequential damages. Some states do not allow the exclusion or limitations of implied warranties, incidental or consequential, so the above limitations and exclusions may not apply to you.

Retailers and wholesale outlets for Diamondback Fitness products are not authorized to modify this warranty in any way.

This warranty gives the original owner specific legal rights. Other additional rights may vary from state to state.

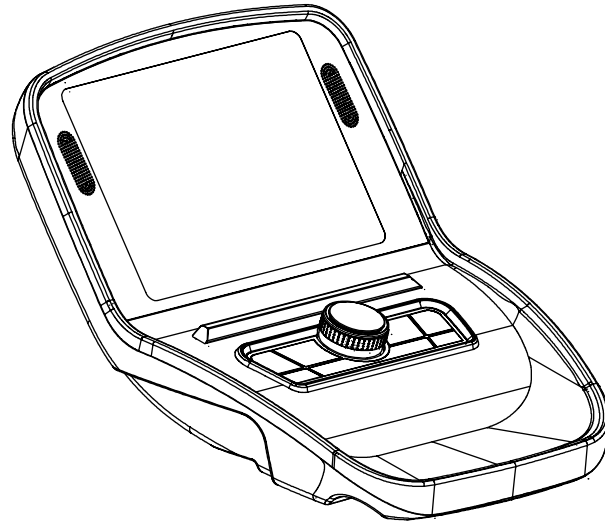

For the most up to date info about using your console and our latest support videos, please visit www.diamondbackfitness.com

If you have any questions please contact our support team at support@diamondbackfitness.com.

DIAMONDBACKFITNESS